 
 


rok
INDOOR CHIME
User Manual

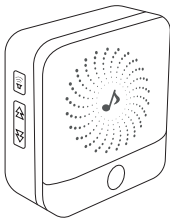

 
Product picture

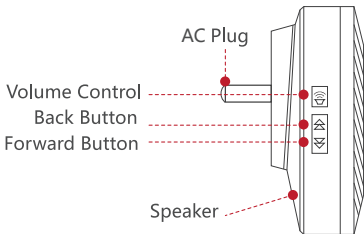

QUICK START


Paring the indoor chime to a Doorbell

(1) Select your favorite ringtone before pairing using the forward/back buttons.

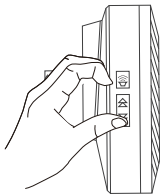

(2) Hold the volume control button for 5 seconds until a Ding-Dong is heard and the LED indicator starts flashing to enter pairing mode.

(3) Press the doorbell ring button to send a signal to the chime. When pairing is successful, the indoor chime will play the selected ringtone automatically.

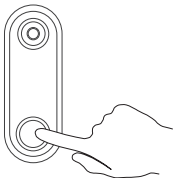


***Note:**

- Pairing mode will only last for 5 seconds
- Pairing mode will `exit` automatically after pairing is completed

Volume control

Press the volume control button on the chime to toggle between High and Low volume.

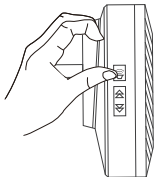

Set Ringtone (There are 52 ringtones to choose)

- (1) Press Forward or Back button to choose your favorite ringtone.
The chime will play the ringtone selected.
- (2) The ringtone can be set differently for different doorbells.